

1.The full sets of the kit

Item numbers
are as shown
in the picture
if not specified



2-1. install your motors,
tighten them up with the mounts




2-2. Install the motor with mount to the Aluminum Tube. Use the small-long screws in your screw bag




2-3. Now..please install the "foot"



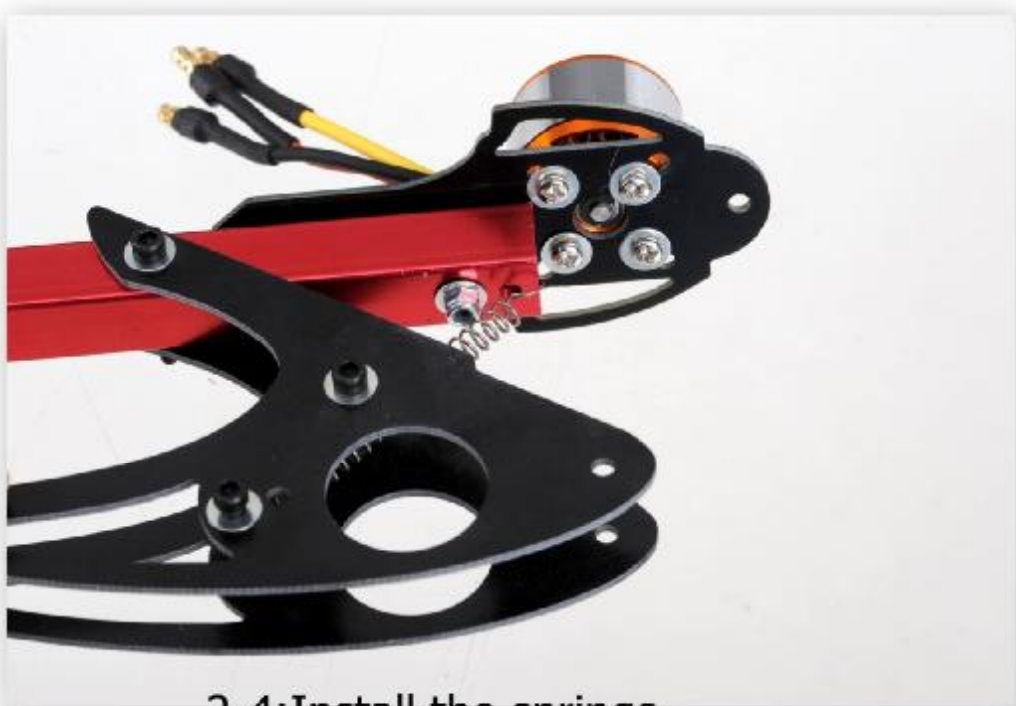

2-4: Install the springs, they connect the top of the Al tube and screw fixing the "foot"



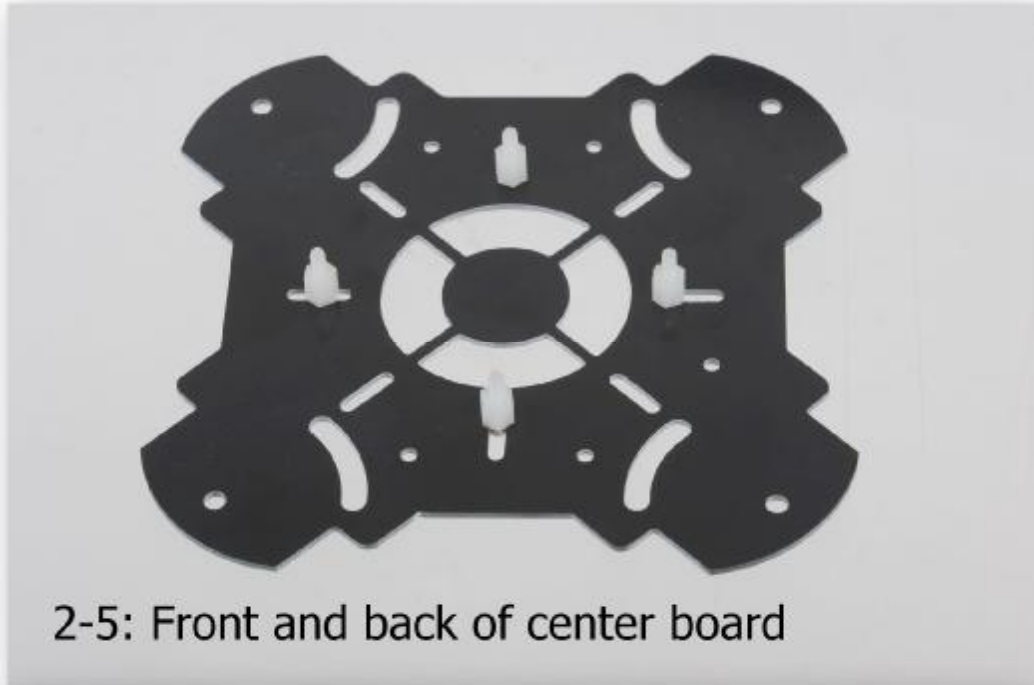

2-5: Front and back of center board




2-6: Connecting the AL tube to center board




2-7: Complete look without wires and KK board



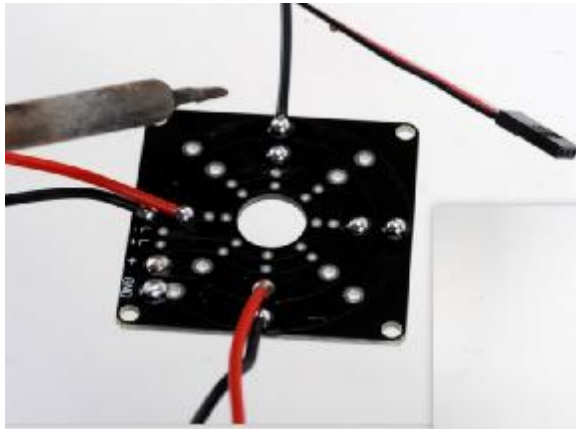

3-1: We now begin to handle the wires.
Welding your motor connector to
ESC connecting board.
RED(+) inside
BLACK(-)outside

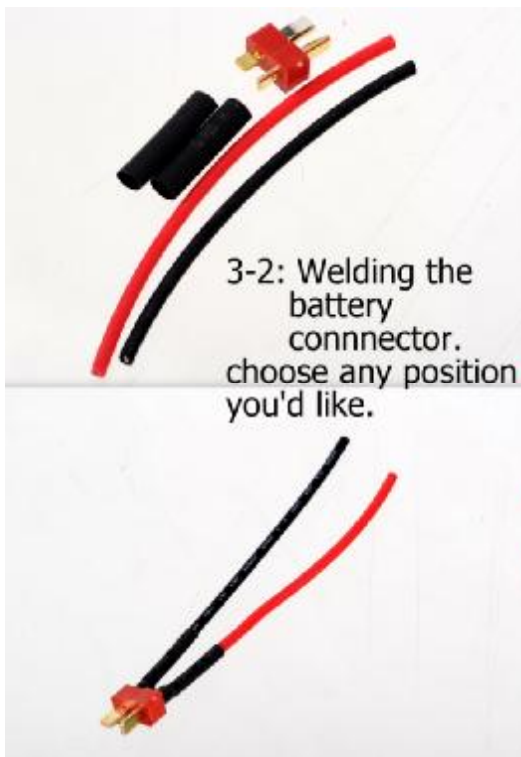

3-2: Welding the
battery
connector.
choose any position
you'd like.

